

INSTALLATION INSTRUCTIONS

1. Check Doorway Size:

Finished Doorway Width for 2-Door = 2 Door Widths less 1" (24.4 mm)

Finished Doorway Width for 3-Door = 3 Door Widths less 2" (50.8 mm)

Finished Doorway Height = 2 Door Height + 1-3/4" 44.4mm)

Narrow Track



(1-1/2" (38.1mm) center to center)

Use "A" and "B" Hangers

Wide Track

(1-3/4" (44.4mm) center to center)

Use "B" Hangers on 1-3/8" (34.9mm) Doors

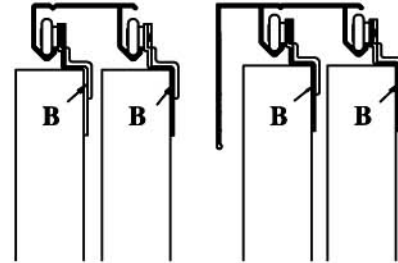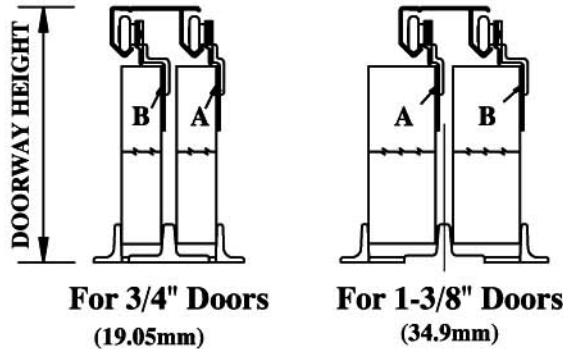



2. Mount Track and Attach Hangers

NOTE: In sets containing both "A" and "B" hangers, when hanging 1-3/8" (34.9mm) thick doors use "A" hangers on frontdoor and "B" hangers on rear door. For 3/4" (19.05mm) thick doors, use "B" hangers on front door and "A" hangers on rear door.

Mount Hangers

One Piece Hangers

Micro-Adjust Hangers

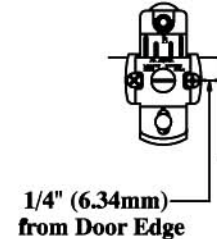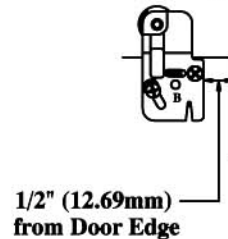


3. Hang Doors

Mount rear door first by tilting door back and resting hangers on rear rail.

4. Adjust Door to Square with Sides of Doorway.


ONE PIECE HANGERS

Loosen two mounting screws, rotate hanger with screwdriver and tighten screws.

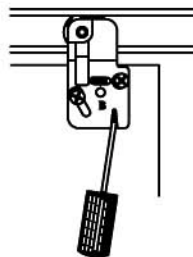

MICRO-ADJUST HANGERS

Loosen two mounting screws, turn nylon cam with screwdriver, tighten screws.

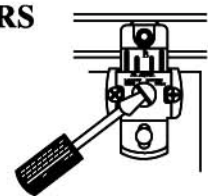

5. Install Door Guide(s) where Doors overlap.

(Adjustable Style)




(Fixed Style)



6. Install Stops (optional) and Pulls

2-Door

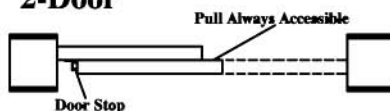

3-Door

